

**ONKYO® SERVICE MANUAL****COMPACT DISC CHANGER  
MODEL DX-C140/DX-C340****Black and Silver models**

BMD	120V AC, 60Hz
BMP/BMPA/SMP	230V AC, 50Hz
BMWT	120/220V AC, 50/60Hz

**SAFETY-RELATED COMPONENT WARNING!!**

COMPONENTS IDENTIFIED BY MARK  $\Delta$  ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

**SPECIFICATIONS**

Compact Disc Automatic Changer Model DX-C140/C340

Signal readout system:	Optical non-contact
Reading rotation:	About 500 - 200 r.p.m. (constant linear velocity)
Linear velocity:	1.2 - 1.4 m/s
Error correction system:	Cross Interleave Reed-Solomon code
D/A converter:	1 bit PWM/ACCUPULSE
Sampling frequency:	352.8 kHz (8 times oversampling)
Number of channels:	2 (stereo)
Frequency response:	5 Hz - 20 kHz
Total harmonic distortion:	0.005% (at 1 kHz)
Dynamic range:	96 dB
Signal to noise ratio:	92 dB
Channel separation:	92 dB (at 1 kHz)
Wow and Flutter:	Below threshold of measurability
Output level:	2 volts r.m.s.
Power consumption:	10 watts
Power supply:	
DX-C340:	120V, 60Hz 230V, 50Hz 220-230V/120V switchable, 50/60 Hz
DX-C140:	120V, 60 Hz
Dimensions (W x H x D):	435 x 131 x 433 mm (17-1/8" x 5-3/16" x 17-1/16")
Weight:	6.9 kg (15.2 lbs.)

**ONKYO®**  
**AUDIO COMPONENTS**

## TABLE OF CONTENTS

Specifications	1
Service procedures	2
Caution on replacement of optical pick-up	2
Protection of eyes from laser beam during servicing	3
Laser warning label	3
IC block diagram and descriptions	4
Microprocessor connection diagram	8
Microprocessor terminal description	9
Care should be taken with the optical pickup	10
Adjustment procedure	11
Pick-up drive unit/part list	12
Trouble shooting	13
Initializing operation	15
Error message displayed in heat-running mode	16
Chassis exploded view parts list	17
Changer mechanism parts list	18
Chassis exploded view	19
Block diagram	21
Schematic diagram	23
Printed circuit board view from bottom side	25
Printed circuit pc board-parts list	29
Packing view/parts list	31

## SERVICE PROCEDURES

### 1. Safety-check out

After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Connect the insulating-resistance tester between the plug of power supply cord and chassis.


Specifications: More than 10Mohm at 500V.

### 2. Voltage Selector (Back panel)

Worldwide models are equipped with a voltage selector to conform with local power supplies. Be sure to set this switch to match the voltage of the power supply in user's area before turning the power switch on.

Voltage is changed by sliding the groove in the switch with a screw driver to the right or left.

Confirm that the switch has been moved all the way to the right or left before turning the power switch on.

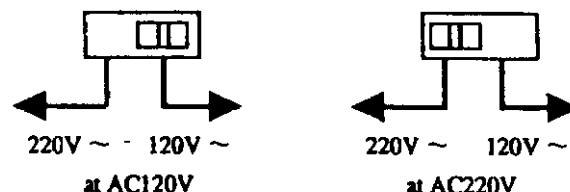

## CAUTION ON REPLACEMENT OF OPTICAL PICK UP

The laser diode in the optical pickup block is so sensitive to static electricity, surge current and etc, that the components are liable to be broken down or its reliability remarkably deteriorated.

During repair, carefully take the following precautions. (The following precautions are included in the service parts.)

### PRECAUTIONS

#### 1. Ground for the work-desk.

Place a conductive sheet such as a sheet of copper (with impedance lower than 10MΩ) on the work-desk and place the set on the conductive sheet so that the chassis.

#### 2. Grounding for the test equipment and tools.

Test equipments and toolings should be grounded in order that their ground level is the same the ground of the power source.

#### 3. Grounding for the human body.

Be sure to put on a wrist-strap for grounding whose other end is grounded.

Be particularly careful when the workers wear synthetic fiber clothes, or air is dry.

#### 4. Select a soldering iron that permits no leakage and have the tip of the iron well-grounded.

#### 5. Do not check the laser diode terminals with the probe of a circuit tester or oscilloscope.

# PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs a laser. Therefore, be sure to follow carefully the instructions below when servicing.

## WARNING!!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION, BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.



## Laser Diode Properties

- Material: GaAlAs.
- Wavelength: 760~800nm
- Emission Duration: continuous
- Laser output: max. 0.5mW\*

\*This output is the value measured at a distance about 1.8mm from the objective lens surface on the Optical Pick-up Block.

## LASER WARNING LABEL

These labels are located on the mechanism.

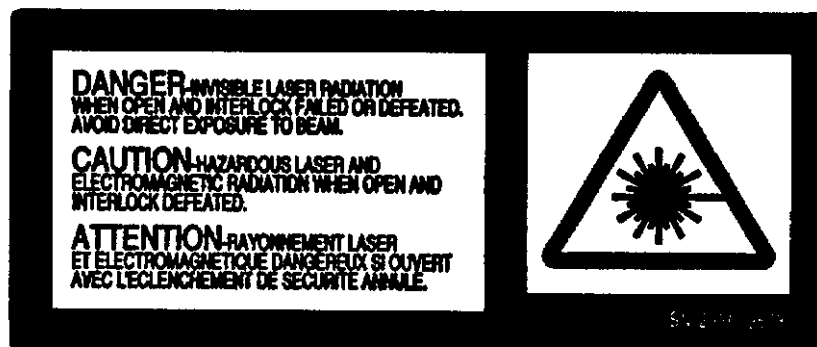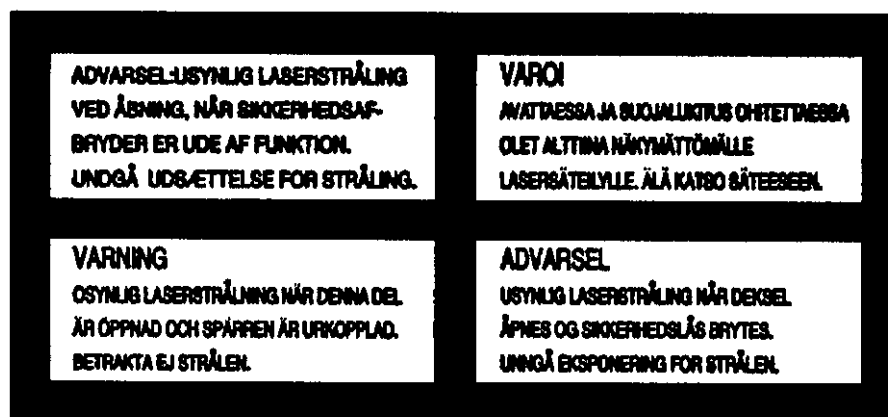


CLASS 1  
LASER PRODUCT

## CAUTION ON REPLACEMENT OF OPTICAL PICKUP

The laser diode in the optical pickup block is so sensitive to static electricity, surge current and etc. that the components are liable to be broken down or its reliability remarkably deteriorated.

During repair, carefully take the following precautions.

1. When replacing the optical pickup, first short the LD terminals and remove the connector. Also, when attaching the new optical pickup, after attaching the connector, unsolder the LD terminals.
2. Do not touch the optical pickup object lens with the hands.

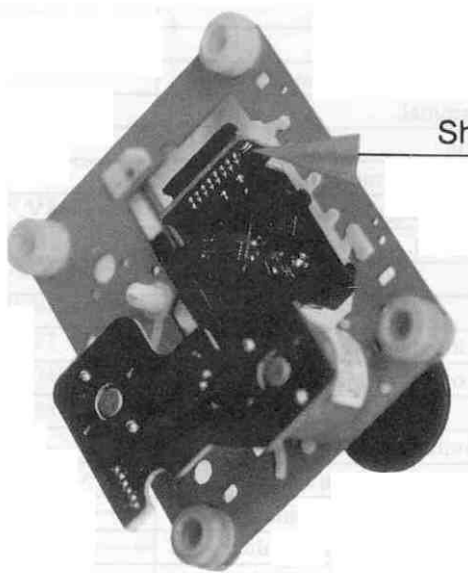

Short pattern for LD protection.

# ADJUSTMENT PROCEDURES

## Instruments required

Dual trace oscilloscope, Frequency counter, AF oscillator, Test disc (SONY YEDS-18) and AC voltmeter.

### 1. Focus offset adjustment

Turn R108 and R126 to the mechanical center.

Load the test disc YEDS-18 on the tray and play the track 2.

Connect the oscilloscope to terminal P106.

Adjust R108 until the waveform on the oscilloscope becomes maximum.

After adjustment, disconnect the oscilloscope.


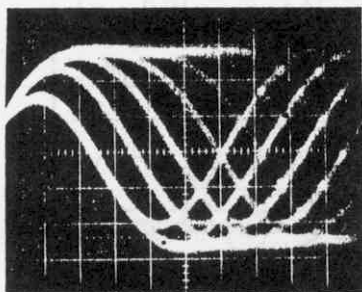


Photo 1

0.2V/div  
0.2 $\mu$ s/div

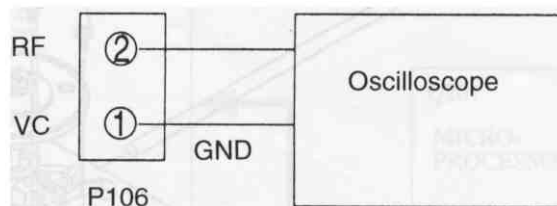


### 2. Focus gain adjustment

Set the output of AF oscillator to 1KHz,—2 Vp-p.


Play the track 2 of test disc.

Connect the oscilloscope and the AF oscillator as shown below.

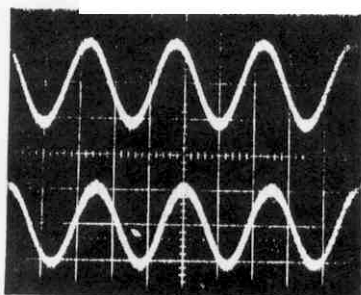

Photo


0.5V/div  
0.5ms/div

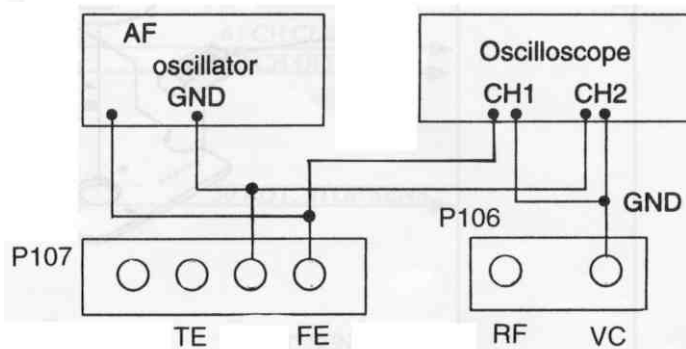

Adjust R126 until 1KHz components of channels 1 and 2 on oscilloscope become same level.


After adjustment, disconnect the AF oscillator and the oscilloscope.


# PICK-UP DRIVE UNIT

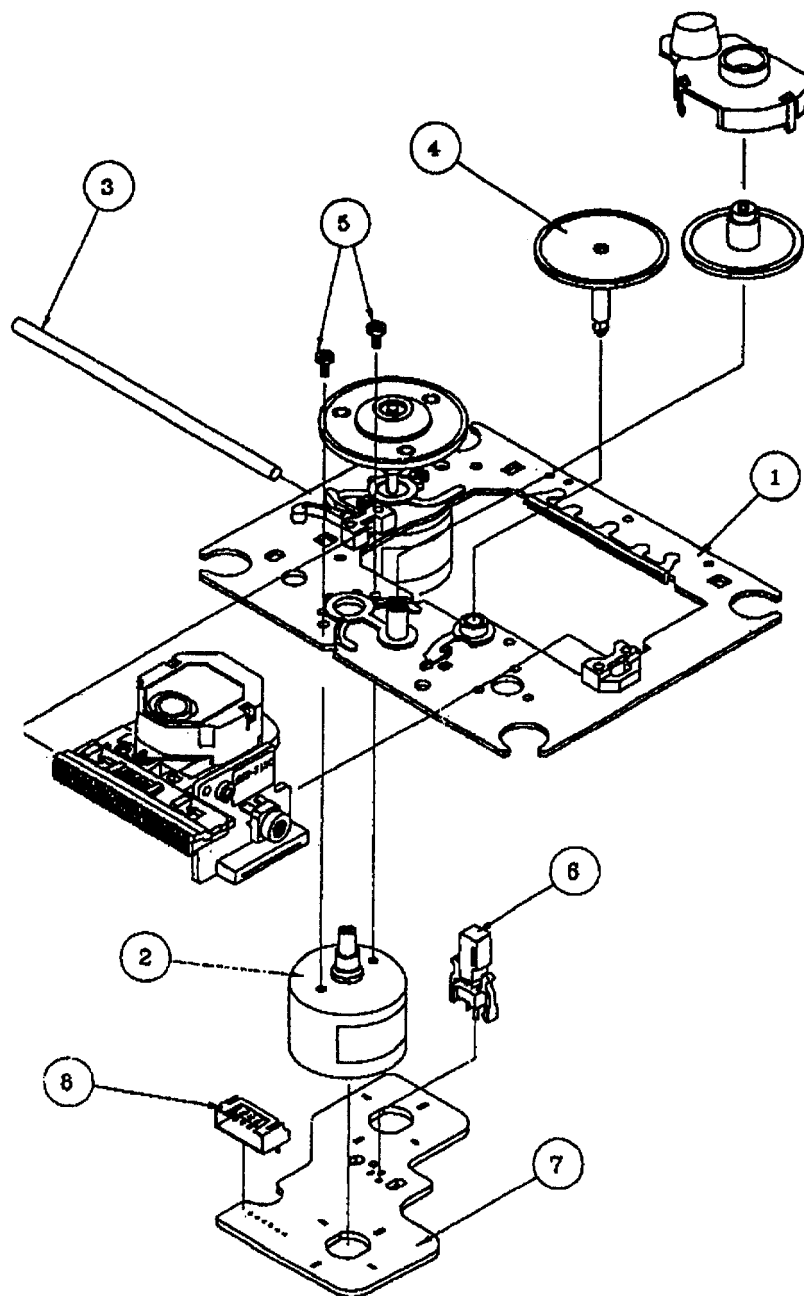

REF.NO.	PART NO.	DESCRIPTION
1	X2625-877- 1	Motor chassis ass'y (MB)
2	X2625-769- 1	Motor gear ass'y
3	2626-908- 01	Sled shaft
4	2626-907- 01	Gear (A)(S)
5	7621-255- 15	Screw +P2x3
6	1572-085- 11	Leaf switch
7	1639-678- 12	Motor (6P) (S) PCB
8	1564-722- 11	Connector pin 6P


# TROUBLE SHOOTING

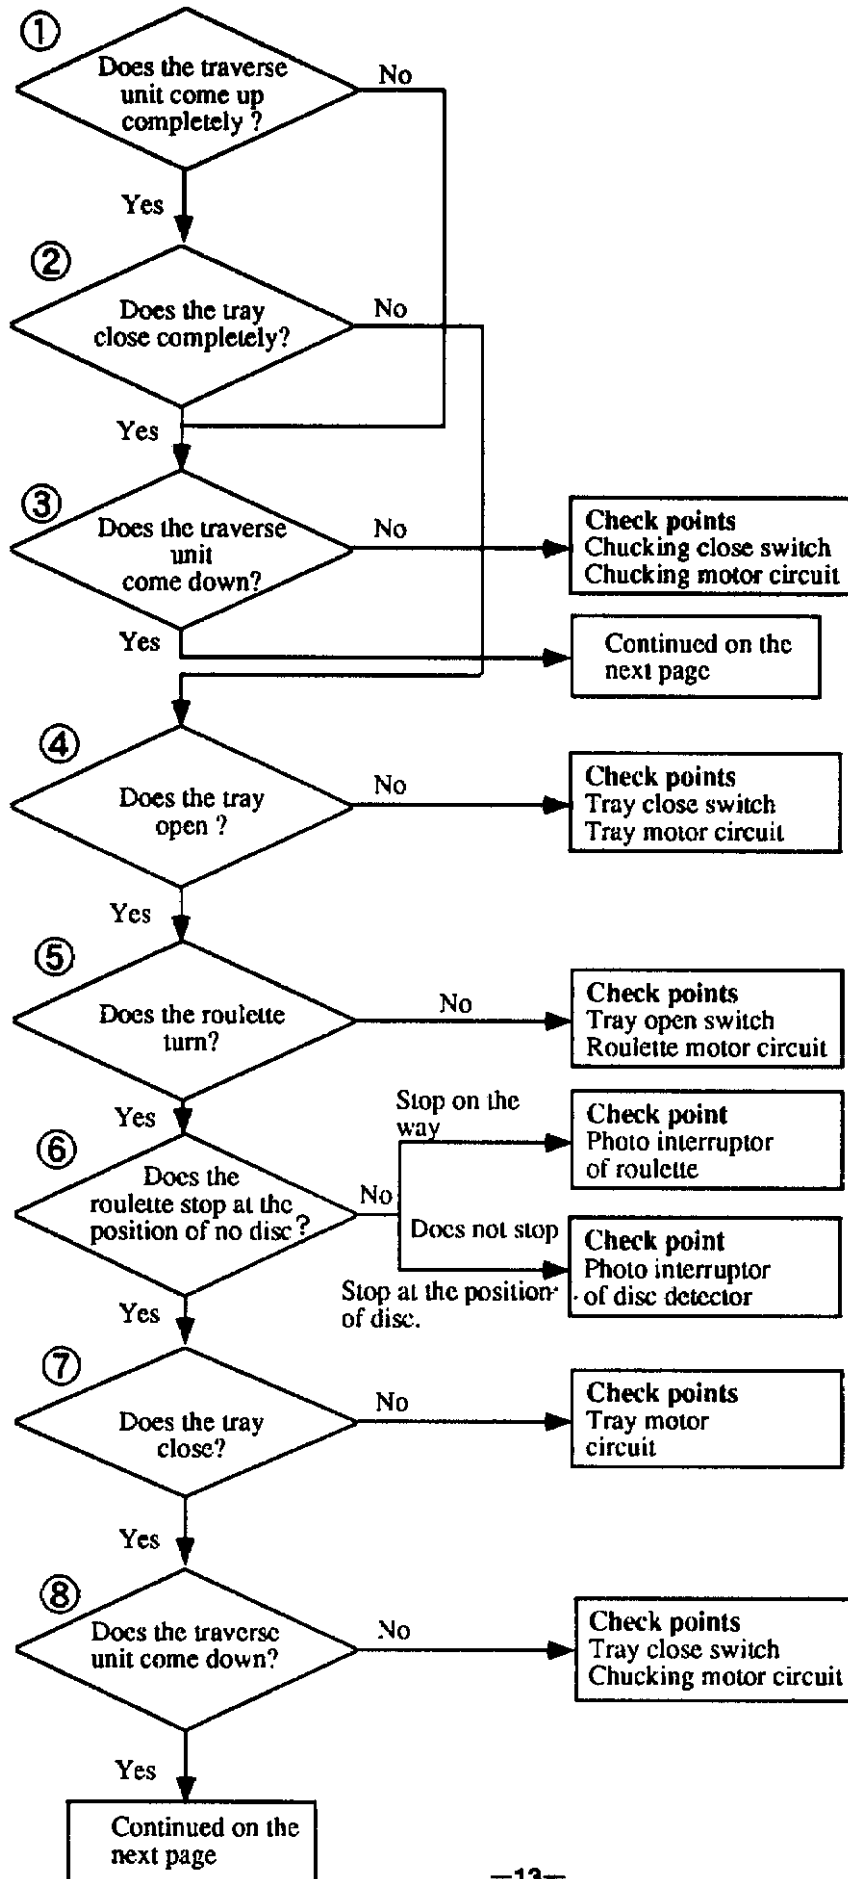

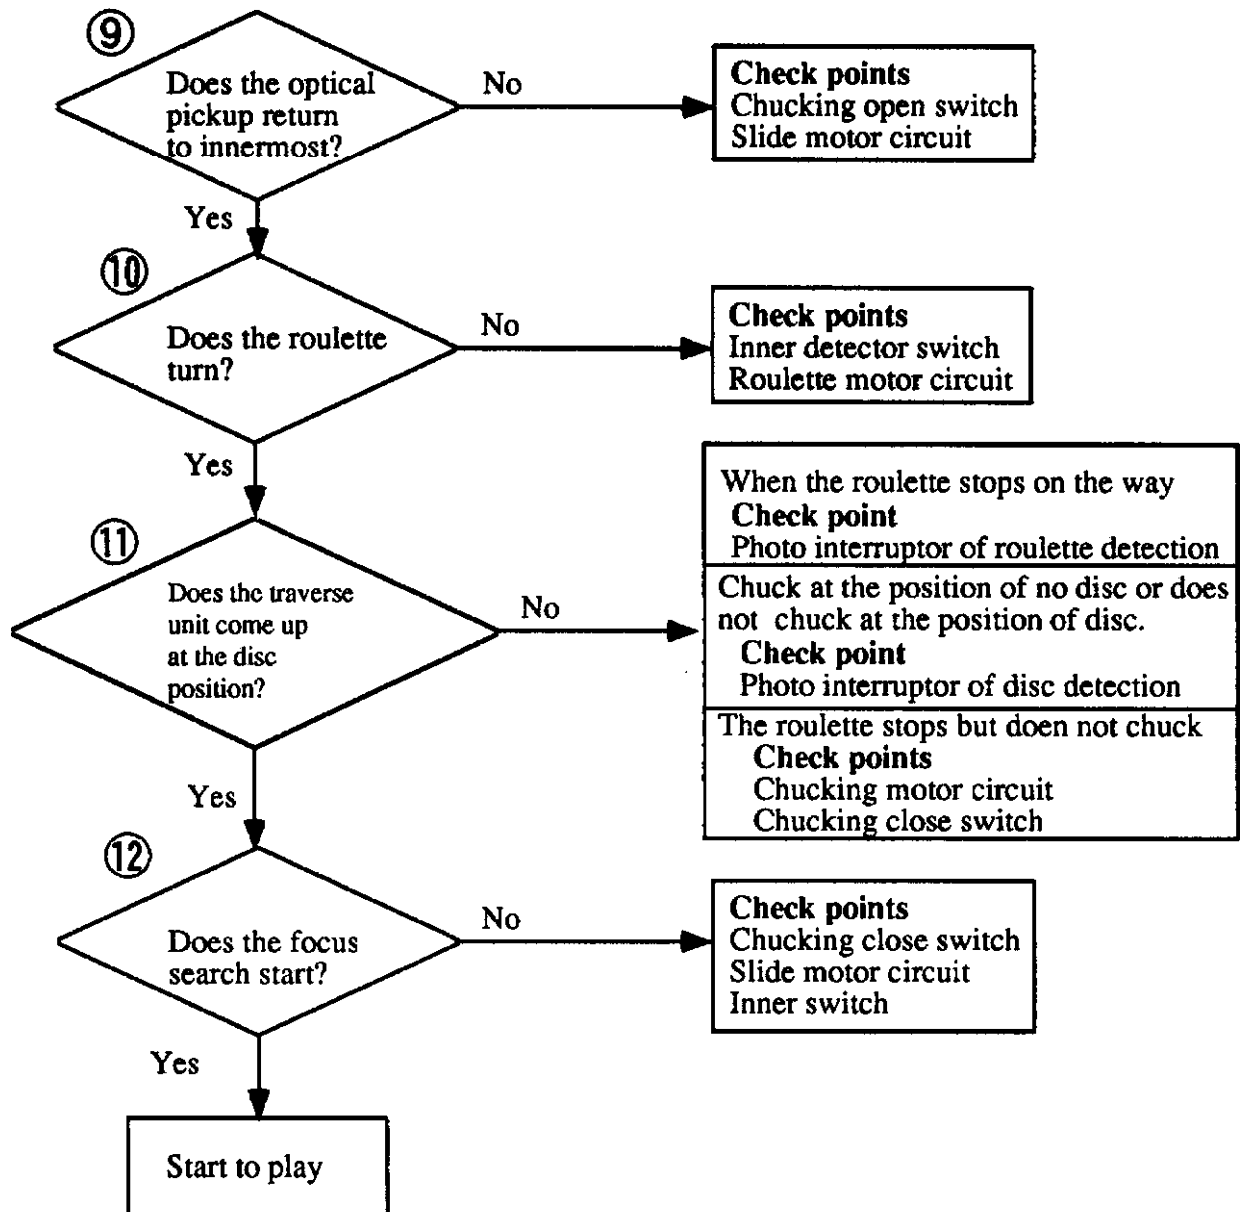



INITIALIZING OPERATION

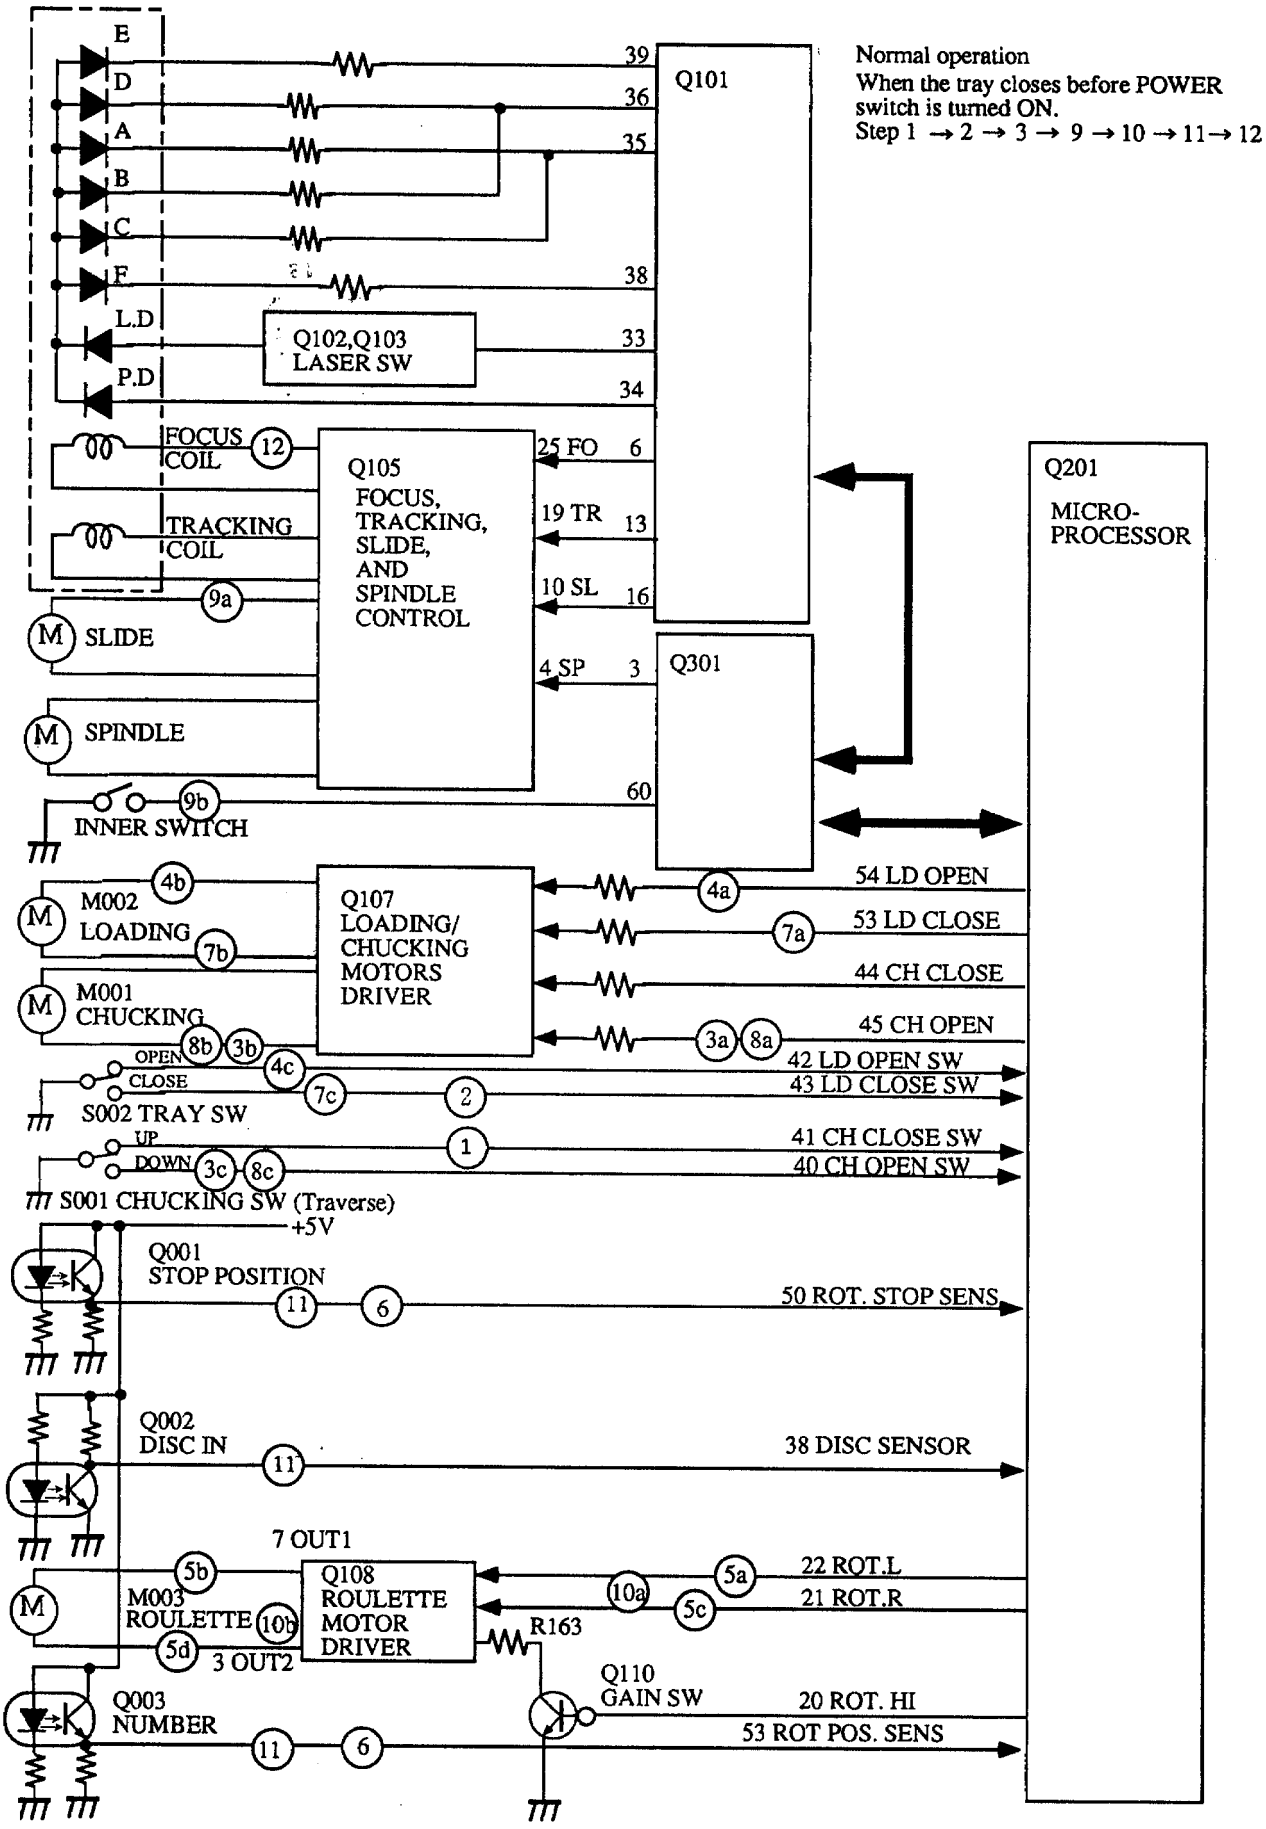

## ERROR MESSAGE DISPLAYED IN HEAT-RUNNING MODE

**Heat-running Mode : Power ON as pushing DOWN button together.**

### **Operation :**

1. DISC 1 chucking and TOC Reading ( Pick-up Home position is displayed. )
2. Accessing of the Outmost Track
3. Tray Open
4. Tray Close
5. DISC 1 Playing / Stop and Chucking Down
6. Roulette Turning 7/6 Turns clockwise

Then,

1. DISC 2 chucking and TOC Reading ( Pick-up Home position is displayed. )
2. Accessing of the Outmost Track
3. Tray Open
4. Tray Close
5. DISC 2 Playing / Stop and Chucking Down
6. Roulette Turning 5/6 Turns counter-clockwise

Then,

Continued as the above.

In these operation Error Message is shown in the display if any error occurs in the mechanism or the servo control. And then you can find the failure point almost exactly in this mode before you repair rejected units.

1. nf : FOCUS NG : FOCUS SERVO ON missed ( Failure in Laser or RF circuit )
2. ng : GFS NG : TIMEOUT for Non-GFS ( Synchronous Signal Detection ) ( Failure in RF Demodulator or CLV )
3. ld : TOC Reading NG : TIME OUT Before TOC Reading completion ( All SERVO Circuit )
4. Ac : ACCESS NG : TIME OUT before ACCESS completion ( All SERVO Circuit )
5. co : CH OPEN NG : Non-CHUCKING Open
6. cc : CH CLOSE NG : Non-CHUCKING Close
7. rL : ROT LEFT NG : Non CCW Turning of Roulette or Non-Detection of CCW Turning of Roulette
8. rr : ROT RIGHT NG : Non CW Turning of Roulette or Non-Detection of CW Turning of Roulette
9. OP : TRAY OPEN NG : Non TRAY Open
10. CL : TRAY CLOSE NG : Non TRAY Close
11. PU : PICK UP RETURN NG : PICK-UP Non Return to the inner most.

**There are two Errors in the normal operation as follows.**

1. Er : INITIALIZE ERROR : Error occurred in Mechanism when it is initialized. ( Error points are displayed in Heat-running Mode. )
2. rn : RAM NG : RAM for File is not Initialized.

## CHASSIS EXPLODED VIEW PARTS LIST


REF. NO.	PART NO.	DESCRIPTION
A1	27110990	Front bracket <B>
	27110991Y	Front bracket <S>
A2	838130088	3TTB+8B, Self-tapping screw
A3	28191776A	Clear plate <B>
	28191777A	Clear plate <S>
A4	28325465Y	Knob (POW) <B>
	28325466Y	Knob (POW) <S>
A5	27270400	Spacer (POW)
A6	27100327Y	Chassis
A7	27191000Y	Holder (MFS)
A8	260208	Wire tie
A13	27175316B	Leg
A14	28141332Y	Cushion
A17	27300750	▲ Cord bushing #2271
A19	29361957Y	Label (ALL2)
A20	831430088	3TTW+8(BC), Self-tapping screw
A22	27300833Y	Clump, WS-2NS
A23	27301779	Clump, HI-38-0
A24	838430107Y	3TTB+10S(BC), Self-tapping screw
A51	27122321Y	Rear panel <D> (Model DX-C340 only)
	27122324Y	Rear panel <DN> (Model DX-C140 only)
	27122322Y	Rear panel <P,PA> (Model DX-C340 only)
	27122323Y	Rear panel <WT> (Model DX-C340 only)
A301	28184680Y	Top cover <B>
	28184681Y	Top cover <S>
A302	838430088Y	3TTB+8B(BC) <B>
	838230088Y	3TTB+8B(NI) <S>
A501	27211904Y	Front panel <B> (Model DX-C340 only)
	27211906Y	Front panel <B> (Model DX-C140 only)
	27211905Y	Front panel <S> (Model DX-C340 only)
A502	28135244Y	Badge <B>
	28135245Y	Badge <S>
A506	28148365Y	Door <B>
	28148366B	Door <S>
E1	204329005Y	NCFC3-29005, Flexible flat cable
E2	204307007	NCFC3-07007, Flexible flat cable
P951	253192HITY	▲ AS-UC-6#18, AC Cord <D, DN>
	253193HITY	▲ AS-CEE, 250V 2.5A, AC Cord <P, WT>
	253197HIT	▲ AS-SAA, AC Cord <PA>
T901	2300992Y	▲ NPT-1200D, Power transformer <D>
	2300993Y	▲ NPT-1200P, Power transformer <P, PA>
	2300994Y	▲ NPT-1200DG, Power transformer <WT>
U1	1H358580-1AY	NAAR-5880-1A, Main circuit pc board <D,P,PA> (Model DX-C340 only)
	1H358580-1BY	NAAR-5880-1B, Main circuit pc board <WT> (Model DX-C340 only)
	1H357580-2AY	NAAR-5880-2A, Main circuit pc board <DN> (Model DX-C140 only)
U2	1H358581-1AY	NADIS-5881-1A, Display circuit pc board <D,P,PA> (Model DX-C340 only)
	1H358581-1BY	NADIS-5881-1B, Display circuit pc board <WT> (Model DX-C340 only)
	1H357581-2AY	NADIS-5881-2A, Display circuit pc board <DN> (Model DX-C140 only)
U3	1H358582-1AY	NAPS-5882-1A, Power supply circuit pc board <D,P,PA> (Model DX-C340 only)
	1H358582-1BY	NAPS-5882-1B, Power supply circuit pc board <WT> (Model DX-C340 only)
	1H357582-2AY	NAPS-5882-2A, Power supply circuit pc board <DN> (Model DX-C140 only)
U4	1H358583-1AY	NASW-5883-1A, Power switch pc board <D,P,PA> (Model DX-C340 only)
	1H358583-1BY	NASW-5883-1B, Power switch pc board <WT> (Model DX-C340 only)
	1H357583-2AY	NASW-5883-2A, Power switch pc board <DN> (Model DX-C140 only)
U11	1H357554-1Y	NAETC-5854, Position sensor pc board
U12	1H357555-1Y	NAETC-5855, Chacking motor pc board
U13	1H357556-1Y	NAETC-5856, Loading motor pc board
U14	1H357557-1Y	NASW-5857, Chacking switch pc board
U15	1H357558-1Y	NASW-5858, Roulet in/out pc board
U16	1H357559-1Y	NAETC-5859, Disc sensor pc board

NOTE: <B> Black model only  
 <S> Silver model only  
 <D> 120V model only  
 <P> 230V model only  
 <PA> Australian model only  
 <WT> Taiwan model only

NOTE: THE COMPONENTS IDENTIFIED BY MARK ▲ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

## CHANGER MECHANISM PARTS LIST


REF. NO.	PART NO.	DESCRIPTION
M2	24840109Y	Rail
M3	28141337Y	Cushion
M6	24830004Y	Yoke (CHB)
M7	24824006Y	Cap (CHC)
M8	24832006Y	Magnet (CHB)
M10	24804015Y	Motor (RF-500TB-14415)
M11	24810028Y	Pulley
M12	24816010AY	Rubber belt (B)
M15	24810040Y	Gear (PULLEY)
M16	24810039A	Gear (LOAD)
M17	24810041Y	Cam gear (A)
M18	24810042Y	Cam gear (B)
M20	831430088Y	3TTW+8B(BC), Self-tapping screw
M23	24802024Y	Chassis (SUB)
M24	24840111Y	Self-tapping screw
M25	24800017Y	Mecha unit (KSM-213CCM)
M26	24818013Y	Insulator (A)
M27	24818014Y	Insulator (B)
M28	204416004Y	Flexible flat cable (NCFC4-16004)
M29	2009990464	Socket AS (NSAS-12P0618)
M30	24840111Y	Self-tapping screw
M33	24840107Y	Tray
M34	24804021Y	Motor (RF-310TA-11400)
M35	24810046	Pulley
M36	24822018Y	Retainer
M37	838130088Y	3TTB+8B, Self-tapping screw
M38	28141335Y	Cushion
M40	24810045Y	Worm AS
M43	24810043Y	Wheel gear
M44	831430088Y	3TTW+8B(BC), Self-tapping screw
M45	24834017Y	Spacer
M46	24840111Y	Self-tapping screw
M47	24816104	Rubber belt (E)
M48	24840110Y	Roller
M50	24840108Y	Roulette
M51	24834016Y	Washer (A)
M52	24820033Y	Spring (A)
M53	24840111Y	Self-tapping screw
M58	838130088Y	3TTB+8B, Self-tapping screw
M59	838426088Y	2.6TTB+8B(BC), Self-tapping screw

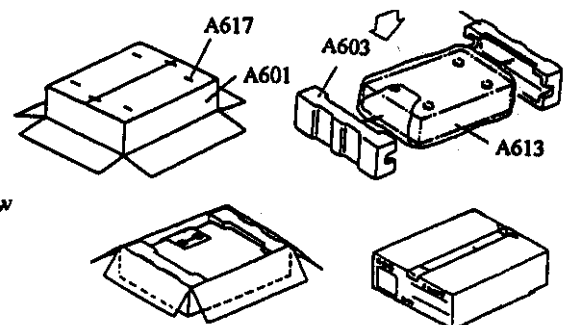


## PACKING VIEW PARTS LIST


REF. NO.	PART NO.	DESCRIPTION
A601	29053143	Carton box <B> (Model DX-C340 only)
	29053145Y	Carton box <B> (Model DX-C140 only)
	29053144Y	Carton box <S> (Model DX-C340 only)
A603	29091774A	Pad (AS)
A613	29100153Y	Poly bag 720x1020
A617	282321Y	Staple
A604	29095795	Sheet (DR)
	Accessory bag ass'y	
	29342426Y	Instruction manual, E
	29342433Y	Instruction manual, T <WT>
	29342431Y	Instruction manual, U3(G,S,W,D) <P>
	29342432Y	Instruction manual, U3(F,S,I) <P>
	29365019BY	Warranty card
	29365042	Warranty card <PA>
	29358002KY	Station list
	2010244Y or	Pin Cord AS
	2010098A or	
	2010326Y	
	2010200Y	3.5mini plug, RI
	25055040	CV-K-2, Converter plug <WT>
	24140331Y	RC-331C, Remote control (Model DX-C340 only)
	3010165Y or	UM-3, Battery (Model DX-C340 only)
	3010194Y	
	27270397Y	Spacer, chassis
	29100097-1AY	Poly bag 350x250
	29360840Y	Label (Sheet)
	29362024-1Y	Label (UPC)AS <D> (Model DX-C340 only)
	29362202	Label (UPC)AS <DN> (Model DX-C140 only)
	29362161Y	Label (EAN)AS <B><P,PA,WT>
	29362162Y	Label (EAN)AS <S><P>
	29361786Y	Label (Malaysia) <WT>

# CHASSIS EXPLODED VIEW

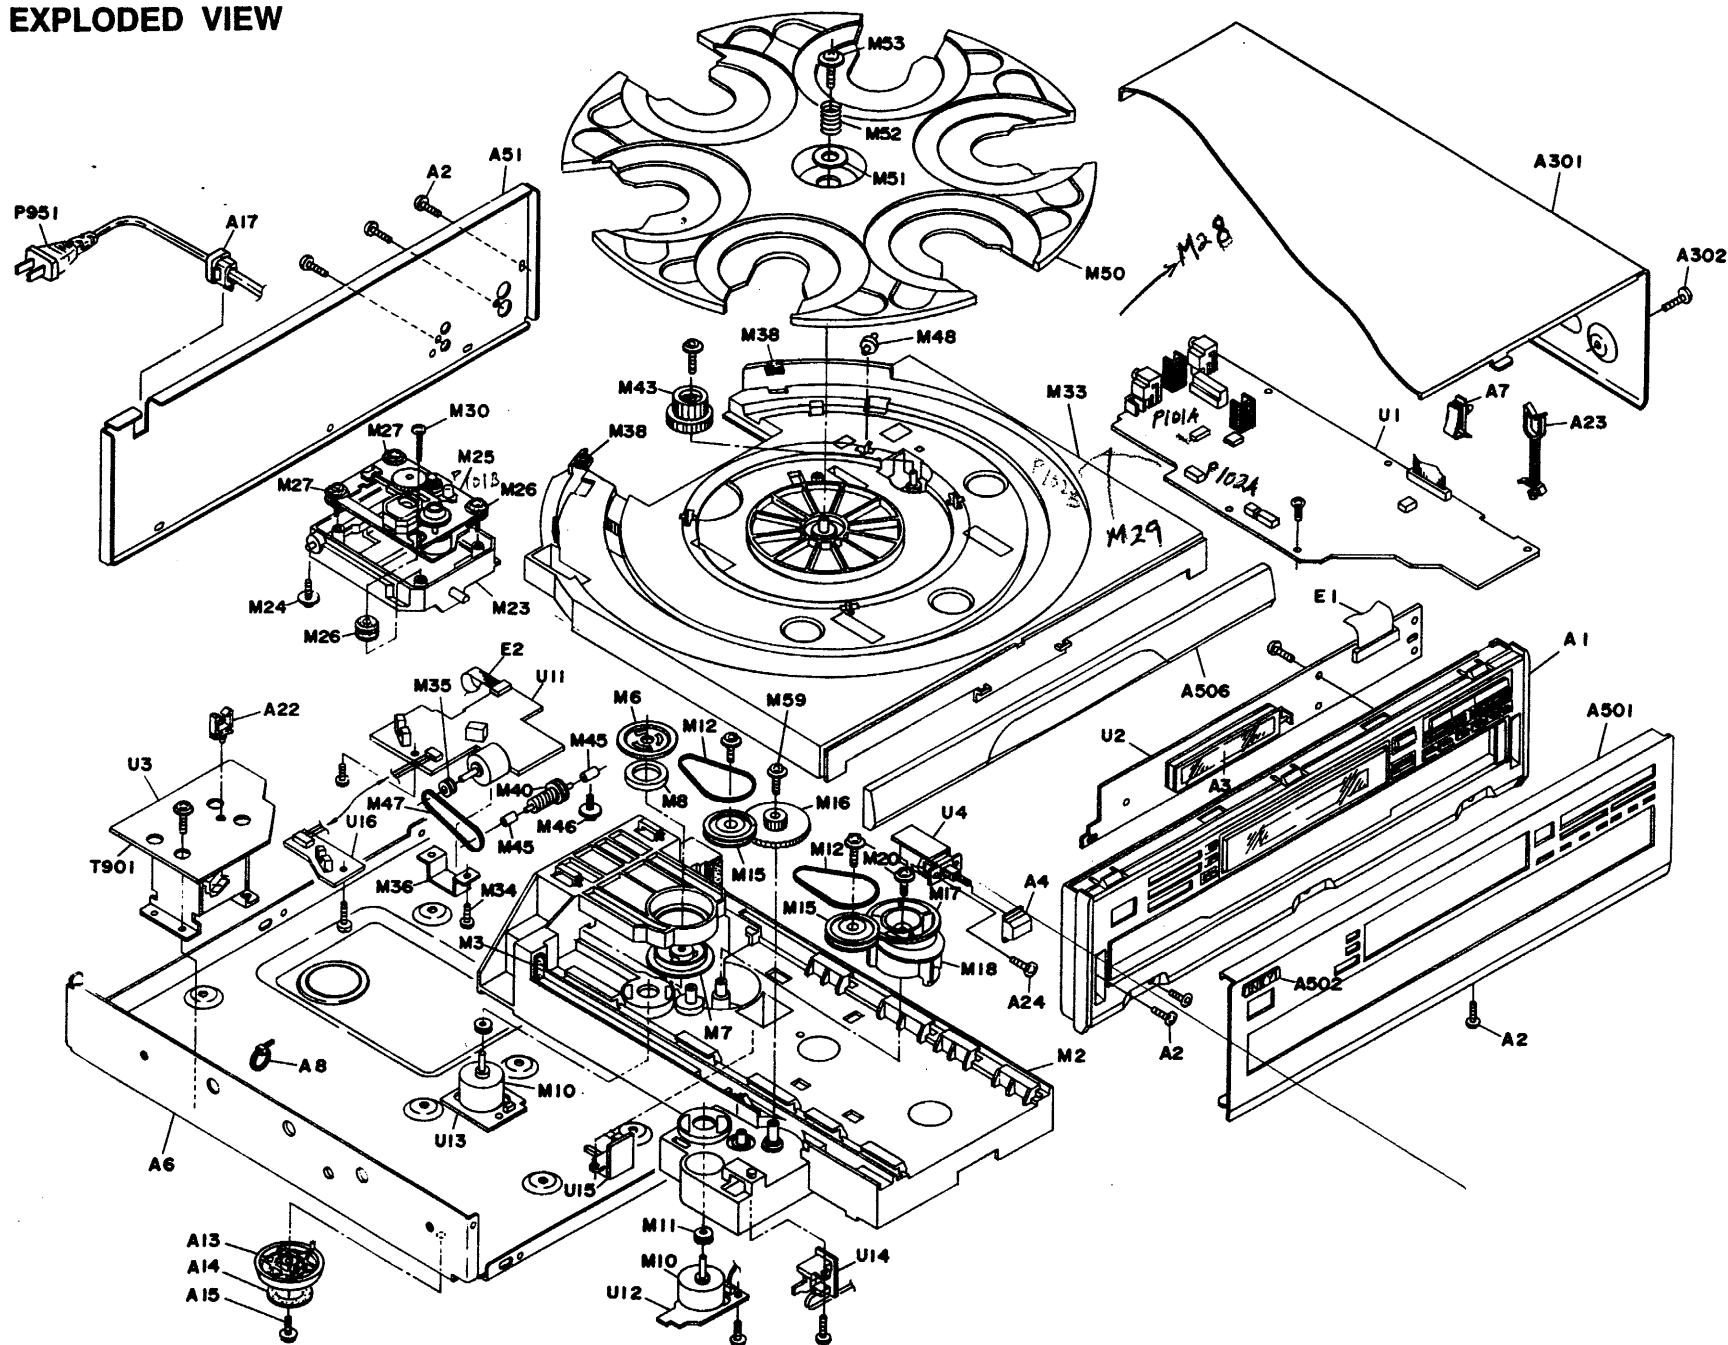

## BLOCK DIAGRAM

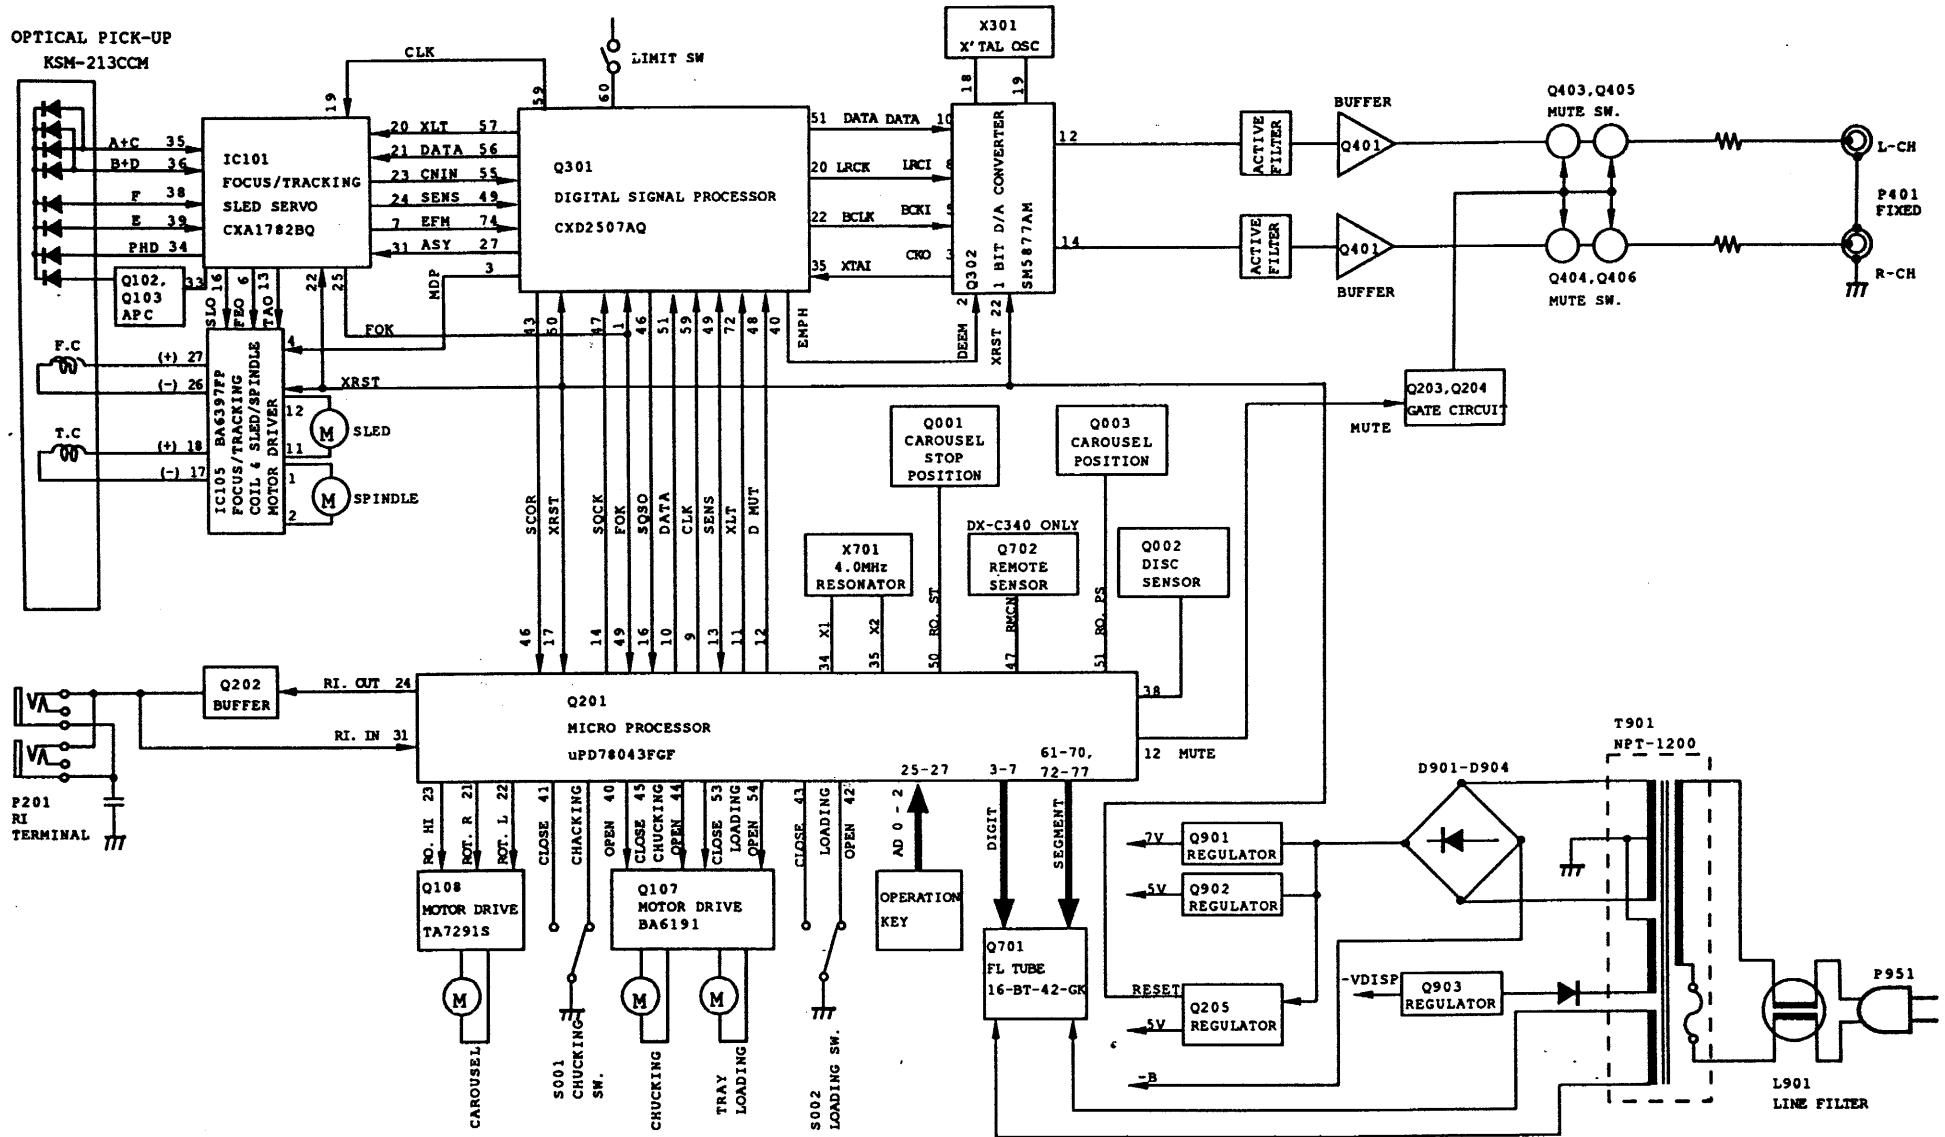

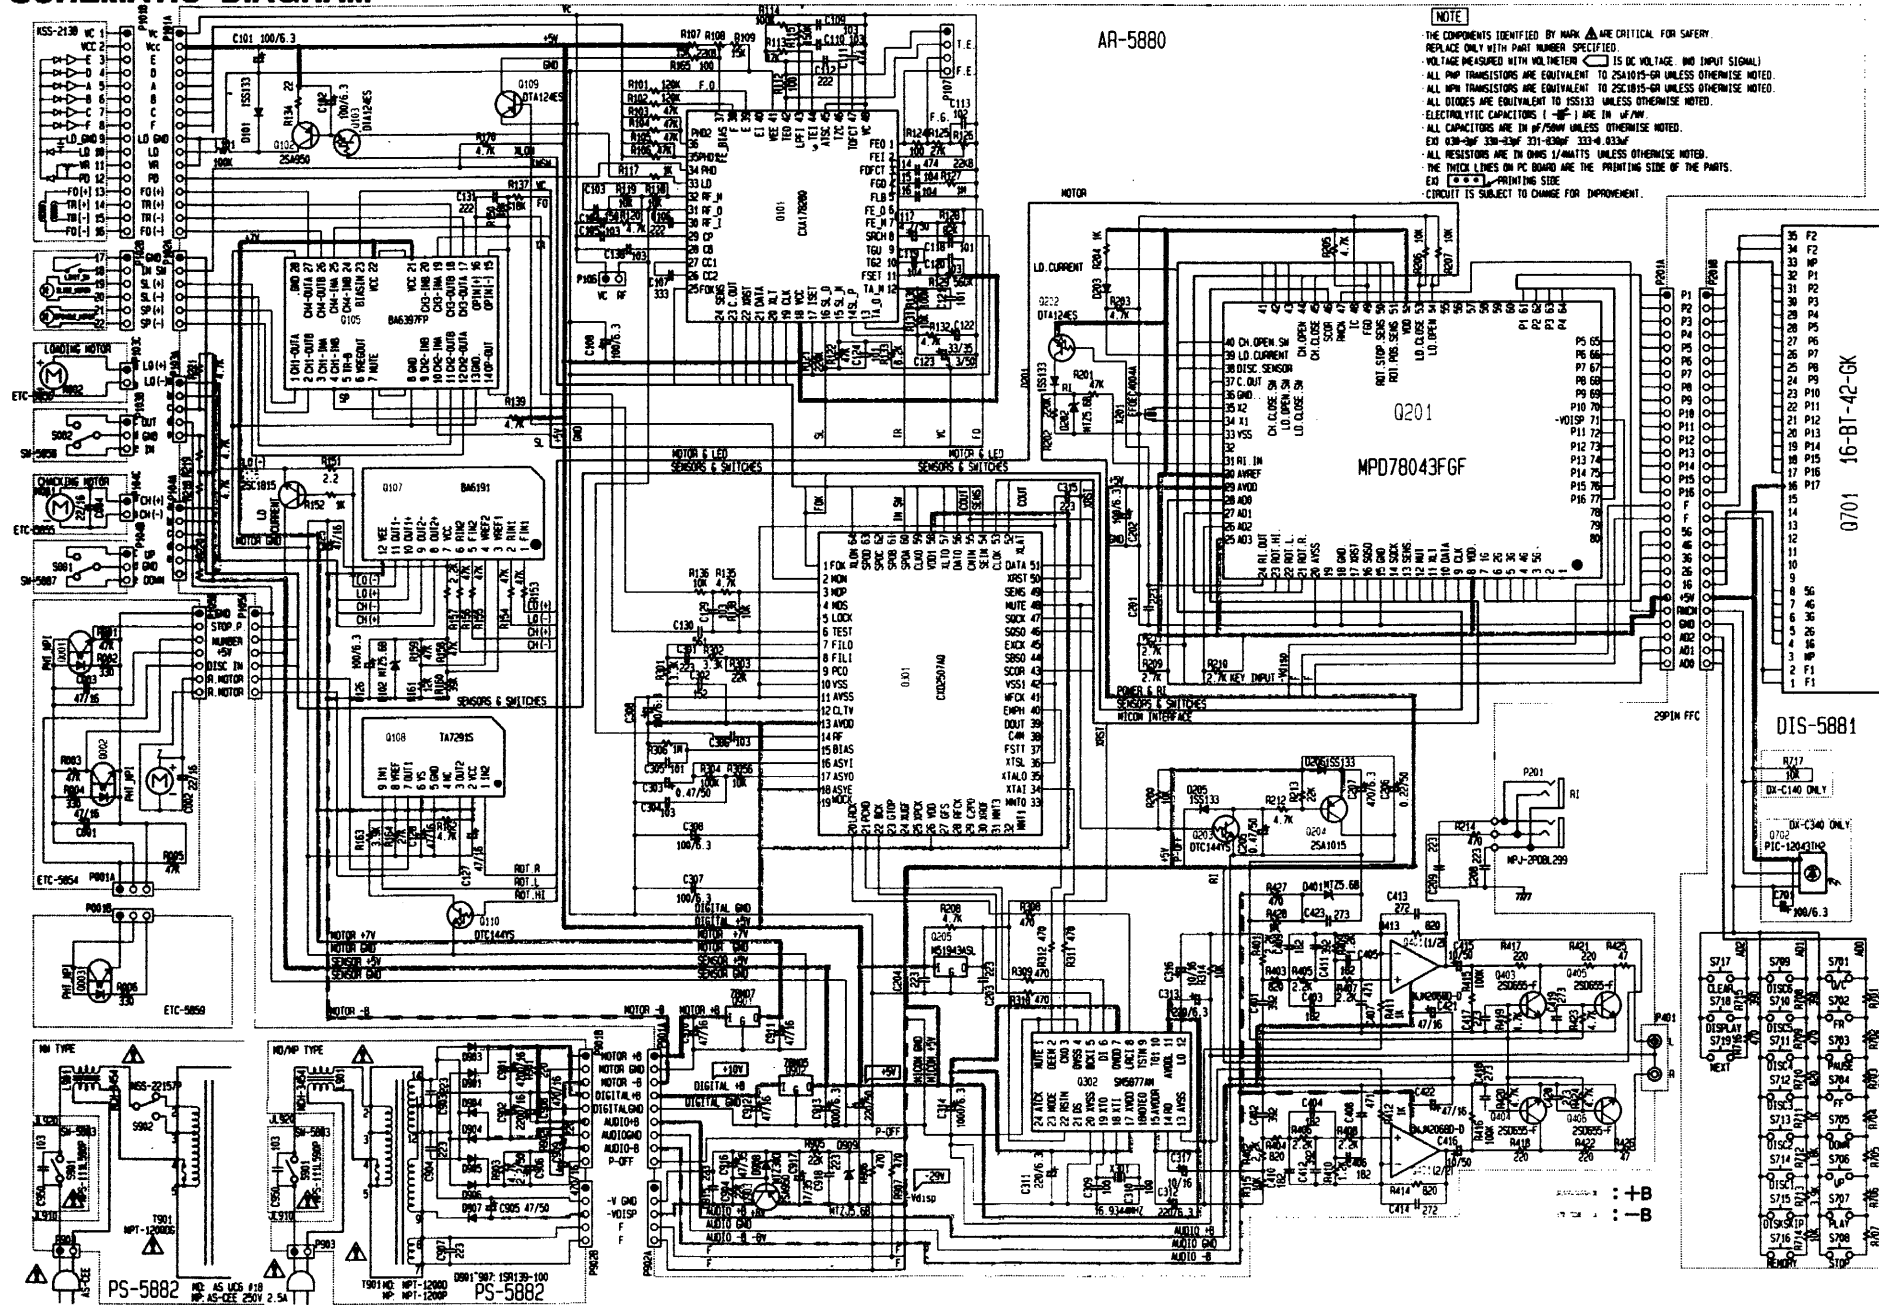

# PRINTED CIRCUIT BOARD — PARTS LIST

## U1 MAIN CIRCUIT PC BOARD (NAAR-5880-1A/1B/2A)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q101	22241093	CXA1782BQ
Q105	22241066	BA6398FP
Q107	22240771	BA6191
Q108	22240239	TA7291S
Q201	22241094	MPD78043FGF-026
Q205	22240018	M51943A
Q301	22241096	CXD2507AQ
Q302	22241074R9	SM5877AM
Q401	222956	NJM2068D-D
Q901	222780075	78M07HF
Q902	222780055	78M05HF
	Transistors	
Q102,Q903	2211504	2SA950-Y
Q103,Q109,Q202	2212600	DTA124ES
Q106	2211255	2SC1815-GR
Q110,Q203	221282	DTC144ES
Q204	2211455	2SA1015-GR
Q403-Q406	2211706	2SD655-F
	Diodes	
D101,D201,D203, D205,D206	223205 or 223163	1SS270A or 1SS133
D102,D202,D401	224470562	MTZJ5.6B, Zener
D908	224472404	MTZJ24D, Zener
D909	224470512	MTZJ5.1B, Zener
	Capacitors	
C101,C102,C108, C126,C202,C308	354721019	100 $\mu$ F, 6.3V, Elect.
C105,C109,C110, C120,C129,C138, C304,C306	374721034	0.01 $\mu$ F $\pm$ 5%, 50V, Plastic
C106,C112,C131, C301,C413,C414, C417-C420,C423	374722224	2200pF $\pm$ 5%, 50V, Plastic
C107	374723334	0.033 $\mu$ F $\pm$ 5%, 50V, Plastic
C111,C114	374724744	0.47 $\mu$ F $\pm$ 5%, 50V, Plastic
C113	374721024	1000pF $\pm$ 5%, 50V, Plastic
C115,C116,C119	374721044	0.1 $\mu$ F $\pm$ 5%, 50V, Plastic
C117	354780479	4.7 $\mu$ F, 50V, Elect.
C122	354763309	33 $\mu$ F, 35V, Elect.
C123	354780339	3.3 $\mu$ F, 50V, Elect.
C125,C127,C128, C135,C421,C422, C910,C911,C912	354744709	47 $\mu$ F, 16V, Elect.
C205,C303	354784799	0.47 $\mu$ F, 50V, Elect.
C206	354782299	0.22 $\mu$ F, 50V, Elect.
C207,C913	354721029	1000 $\mu$ F, 6.3V, Elect.
C215,C216	354781019	100 $\mu$ F, 50V, Elect.
C302		
C311,C312,C313	354722219	220 $\mu$ F, 6.3V, Elect.
C314	354724719	470 $\mu$ F, 6.3V, Elect.
C316,C317	354741009	10 $\mu$ F, 16V, Elect.
C401,C402	374723924	3900pF $\pm$ 5%, 50V, Plastic
C403-C406,C409, C410	374721824	1800pF $\pm$ 5%, 50V, Plastic
C407,C408	374724714	470pF $\pm$ 5%, 50V, Plastic
C411,C412	374723924	3900pF $\pm$ 5%, 50V, Plastic
C415,C416	354781009	10 $\mu$ F, 50V, Elect.
C916,C917	354764709	47 $\mu$ F, 35V, Elect.
	Resistors	
R108,R126	5210263	N06HR, 20KBC, Trim
R217	49163104405	RM1/10H, 100K $\times$ 5, R net
	Ceramic lock	
X201	3010229	EFOBC4004S4
	Resonator	
X301	3010159	AT-38-169, Crystal

## CIRCUIT NO. PART NO. DESCRIPTION

	Holder	
	27190751	X301
	Coil	
L101	233454K100	NCH-1452, 100K
	Sockets	
P101	25051768	NSCT-16P1555
P105A	25051851	NSCT-7P1638
P202A	25051836	NSCT-29P1623
	Plugs	
P102A	25055150	NPLG-6P134
P103A	25055149	NPLG-5P133
P104A	25055150	NPLG-6P134
P106	25055038	NPLG-2P29
P107	25055045	NPLG-4P33
	Jacks	
P201	25045330	NPJ-2PDBL184, RI
P401	25045353	NPJ-2PDBL199, Line out
	Radiators	
	27160145-1Y	RAD51, Q901A
	27160145-1Y	RAD51, Q902A

## U2 DISPLAY CIRCUIT PC BOARD (NADIS-5881-1A/1B/2A)

CIRCUIT NO.	PART NO.	DESCRIPTION
	FL tube	
Q701	212132	5-ST-19GK
	Remote sensor	
Q702	24130011	PIC-12043TE2 (Model DX-C340 only)
	Capacitor	
C701	353721019	100 $\mu$ F, 6.3V, Elect. (Model DX-C340 only)
	Switches	
S701-S719	25035652 or 25035652MAT	NPS-111-S604 or NPS-111-S624
	Holder	
E701	27190941	HOLDER(FL)
	Socket	
P202B	25051873	NSCT-29P1660

## U3 POWER SUPPLY CIRCUIT PC BOARD (NAPS-5882-1A/1B/2A)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Diodes	
D901-D907	22380260 or 22380035	$\Delta$ RL1N4003 or $\Delta$ GP104003E
	Coil	
L901	231222	$\Delta$ NCH-3454, Line filter
	Capacitors	
C901	354744729	4700 $\mu$ F, 16V, Elect.
C902	393342227	2200 $\mu$ F, 16V, Elect.
C905	354784709	47 $\mu$ F, 50V, Elect.
C906	354780229	2.2 $\mu$ F, 50V, Elect.
C908,C909	354744719	470 $\mu$ F, 16V, Elect.
	Switch	
S902	25065437	$\Delta$ NSS-22157P, Voltage selector <WT>
	Plug	
P903	25055676	NPLG-2P632

## U4 POWER SWITCH PC BOARD (NASW-5883-1A/1B/2A)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitor	
C950	3500191	$\Delta$ DE7150F 103M, AC400V/125V, IS C
	Switch	
S901	25035636	$\Delta$ NPS-111-L590P, Power

## U11 POSITION SENSOR PC BOARD (NAETC-5854-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Photo Inter couple	
Q001	24190041	SG-207
Q002	24190046	GP2528
	Capacitors	
C001,C003	354744709	47 $\mu$ F, 16V, Elect.
C002	352942206	22 $\mu$ F, 16V, Elect.
	Socket AS	
P001A	2002390650UL	NSAS-6P0597
P103	2009990447UL	NSAS-10P0596
P104	2009990446UL	NSAS-11P0595
	Socket	
P105B	25051851 or 25050913	NSCT-7P1638 or NSCT-7P700

## U12 CHACKING MOTOR PC BOAR (NAETC-5855-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	
C004	352942206	22 $\mu$ F, 16V, Elect.

## U14 CHACKING SWITCH PC BOARD (NASW-5857-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Switches	
S002	25065491	NMS-1223, Micro

## U15 ROULET IN/OUT PC BOARD (NASW-5858-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Switches	
S001	25065375	NMS-1219, Micro

## U16 DISC SENSOR PC BOARD (NAETC-5859-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Photo intercaplar	
Q003	24190041	SG-207
	Plug	
P001B	25055367	NPLG-3P350

NOTE: <B> Black model only  
<S> Silver model only  
<D> 120V model only  
<P> 230V model only  
<PA> Australian model only  
<WT> Taiwan model only

NOTE: THE COMPONENTS IDENTIFIED BY MARK  $\Delta$  ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.